CRAIG®

WIRELESS
7 inch Netbook

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CLP281x

SETUP GMAIL ACCOUNT FIRST

Please setup your gmail account into this Netbook at initial setup. If you are going to use a password or a pattern unlock you must have a valid gmail account setup in the event you forget either.

Forgot lock pattern on android? Here's a way to reset it.

- Enter wrong pattern 5 times and wait for 30 seconds.
- Select “Forgot pattern” and enter your gmail account username and password.
- Make sure you use the same account that was used to activate the tablet and double check the password by logging in to that Google account in a browser on laptop or PC
- If you don't have access to the original Gmail account, you will need to do a hard reset and loose your settings and apps on the Netbook. The data on the memory card will not be wiped though.

IMPORTANT SAFETY INSTRUCTIONS

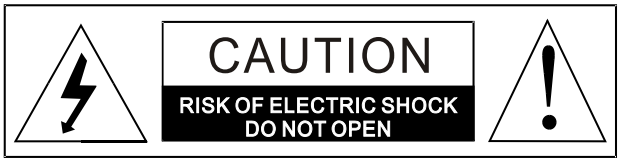

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product`s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC NOTICE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:
To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user`s authority to operate this device.

IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1) **Read these instructions.**
All the safety and operating instructions should be read before the product is operated.

2) **Keep these instructions.**
The safety and operating instructions should be retained for future reference.

3) **Heed all warnings.**
All warnings on the product and in the operating instructions should be adhered to.

4) **Follow all instructions.**
All operating and use instructions should be followed.

5) **Do not use this apparatus near water.**
Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6) **Clean only with dry cloth.**
Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7) **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8) **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**

9) **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**

10) **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**

11) **Only use attachments/accessories specified by the manufacturer.**

12) **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**

An appliance and cart combination should be moved with care.
Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

PORTABLE CART WARNING
(symbol provided by RETAC)

13) **Unplug this apparatus during lightning storms or when unused for long periods of time.**
To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14) **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.**

15) **Power source**
This product should be operated only from the type of power source indicated on the marking label.
If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
For products intended to operate from battery power, or other source, refer to the operation instructions.

16) **Power lines**
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

IMPORTANT SAFETY INSTRUCTIONS

17） Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18） Object and liquid entry

Never push objects of any kind into they product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19） Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper to grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

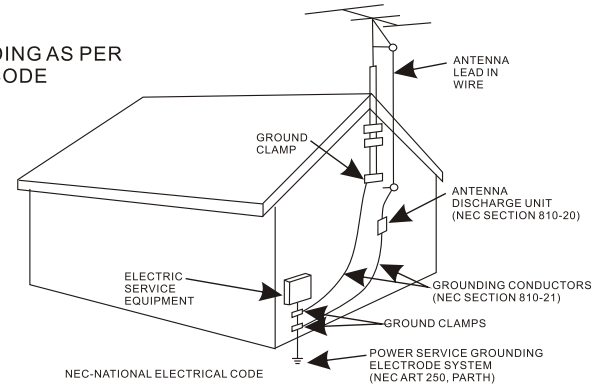
ANTENNA LEAD IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810-21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PARTH)
NEC-NATIONAL ELECTRICAL CODE

20）Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21）Replaccment parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire or electric shock or other hazards.

22）Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operation condition.

23）Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24）Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

a）When the power-supply cord or plug is damaged.

b）If liquid has been spilled or objects have fallen into the product.

c）If the product has been exposed to rain or water.

d）If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will and require extensive work by a qualified technician to restore in the product to its normal operation.

e）If the product has been dropped or the cabinet has been damaged.

f）When the product exhibits a distinct change in performance-this indicates a need for service.

25)Note to CATV System Installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and in particular,specifies that the grounding system of the building,as close to the point of cable entry as practical.

Note:

Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply core or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

IMPORTANT SAFETY INSTRUCTIONS

This manual contains important safety precautions and information for correct usage. Please be sure to read this manual carefully before use to avoid any damages to the device.

- Please do not place the product in hot, wet or dusty environment.
- Please do not place the product in hot environment. Especially in summer, do not place it in a car with all windows closed.
- Avoid dropping or clashing the product and do not shake the TFT screen violently, or it may cause a damage or abnormal display to the screen.
- Please select a suitable volume and avoid loud sound while using earphones. Please turn down the volume or stop using if you get a roaring in your ears.
- For following situations, please charge the product.

A.The device shows on the Buttom right corner.

B.System automatically shut down, and it turns off soon after restart.
C.Operation key shows no reaction.

Notes: Chargers of other models cannot be used for this device because it may cause damage to the device which we are not responsible for. Please contact with our customer service department if you need a replacement charger.

1. Please do not disconnect the device while formatting, downloading and uploading; otherwise it may cause application errors.
2. We are not responsible for any memory erase loss caused by damage or product maintenance, or other personal reasons.
3. Please do not disassemble the product personally, and avoid cleaning the product with ethyl alcohol, thinner and Benzene.
4. Do not use this product in the areas which prohibit use of electronic devices, for example, in an airplane.
5. Please do not use this product while driving or walking in the street, or it might cause a car accident.

NOTES: ~ This device does not support waterproof function.
~ All images on this manual are only for reference! Specification and appearance of the products are subject to change without prior notice!

FIRST USE:

Battery Recharge

The device has a built-in 2 pcs x DC ⎓ 3.7V, 1500 mAh rechargeable Lithium-ion Polymer battery. Recharge as follows:

- Insert the small plug from the supplied AC/DC Adaptor into the DC IN jack on the device. Plug the AC/DC Adaptor into the wall outlet having AC 100-240V~, 50/60 Hz.

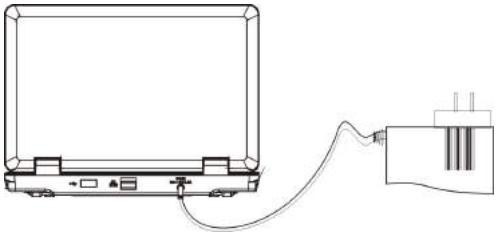

This power unit is intended to be in a vertical or floor mount position.

Notes: Your battery will last longer if you follow these simple guidelines for caring for and storing it.

A. Use the supplied AC/DC Adaptor for charging only. Other model chargers may damage the device.
B. For charging the first time, charge the device approximately 10 hours. For normal charging, the device needs approximately a 4 hour charge.
C. Recharge and store the device within the temperature range of 5°C~35°C (40°F~95°F).
D. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery goes empty will damage battery. Battery life will be extended if you keep the battery fully charge.
E. Battery life naturally shortens slowly over time.
F. The rechargeable battery incorporated into this product is not user replaceable.

SD card

This device supports an SD Memory Card (Card not included). To increase memory size, insert an SD card into the card slot on the side of unit.

Some of applications (such as “Picsel Smart Office”) can be operated by an external SD Card. Insert an SD card (Card not included) into the card slot on the left side of unit as the figure below:

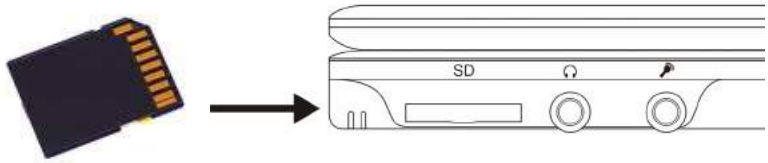

Notes:

A. Insert the card (Up to 32GB, not included) into the card slot on left side of unit with metal chip face up.
B. To take out the card, press the card until a “Click” is heard then pull out the card.
C. Before replacing the storage card, make sure the unit has been powered off.
D. When inserting the storage card, make sure the direction you select is correct. Never insert violently to avoid damaging the card or the unit. If the storage card doesn’t work, please check if the direction is correct.
E. When the card is used for the first time, or it has been used in another device, please format it first through the Computer. You also need to download the desired music, photos and/or movie onto the card before installing into the unit

Important: Formatting the SD Card will delete all the data on the card. Download the data to your computer before formatting the card.

USB Ports (Full size USB port)

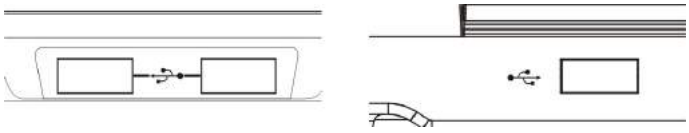

This device supports USB device for extending the memory size, or USB Thumb Drive. If you have one of these devices, insert it into the USB Port on the sides of unit.

Notes:

A. Before replacing the USB drive, make sure the unit has been powered off.

B. When inserting the USB driver, make sure the direction you select is correct. Never insert violently to avoid damaging the USB driver or the unit. If it doesn't work, please check if the direction is correct.

Power on/off the Device

A. Press and hold the Power On/Off button on the front panel to power on the unit

B. To save power of battery. Press the Power.On/Off button to turn off the screen. Press it again to turn the unit on.

C. To power off the device, press and hold the PowerOn/Off button until the "Device option" shows on the screen. Move the cursor to the Power off option and then click the left button. "Power off" menu will appear, move the cursor to "OK" option then left click it.

Notes:

- Like your computer, after turning on the Device, you may have to wait a short while to let the operating system boot up before the home page appears on the screen.

Touch Pad:

Touch the pad to move cursor on the screen as desired. Press the Left or Right button to do click action.

Reset:

If the device becomes abnormal, halts, freezes. Press the RESET Button. To reset the device, please see the figure shown below:

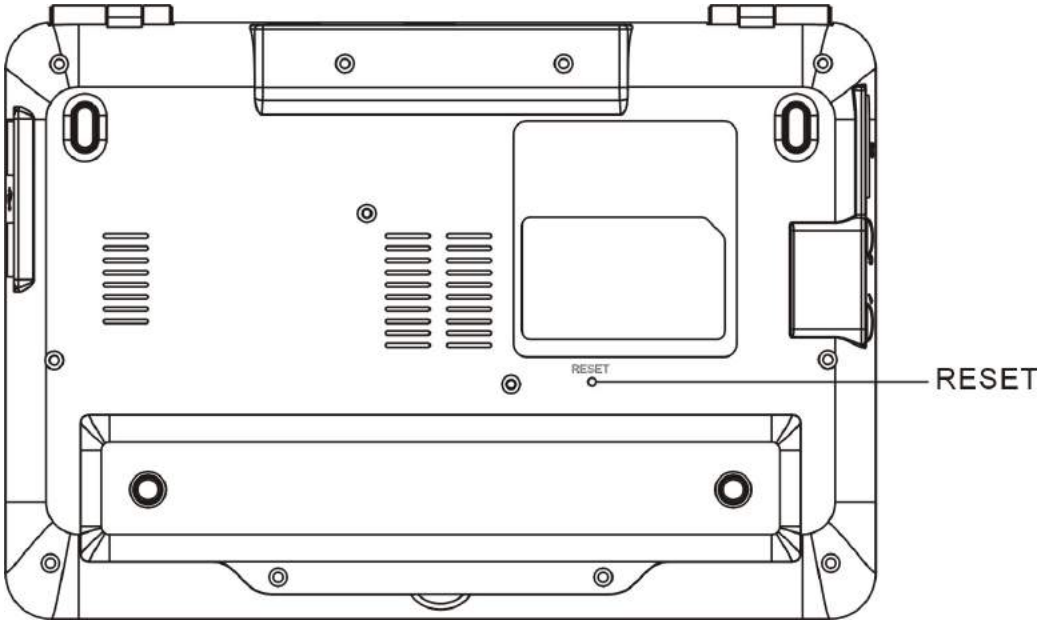

Microphone jack:
For sound recording, connect an external microphone (Not included) to the microphone jack on the left side of cabinet.

Earphone jack:
For private listening, connect an Earphone/Headphone to the Earphone/Headphone jack on the left side of cabinet. The speaker will cut off automatically. (Earphone/Headphone not included).

Ethernet Jack:
For internet connection, connect Ethernet cable to the RJ45 data port on the rear of cabinet with your own ADSL modem or router. (Ethernet cable, ADSL modem and router are not included.)

Location of Controls

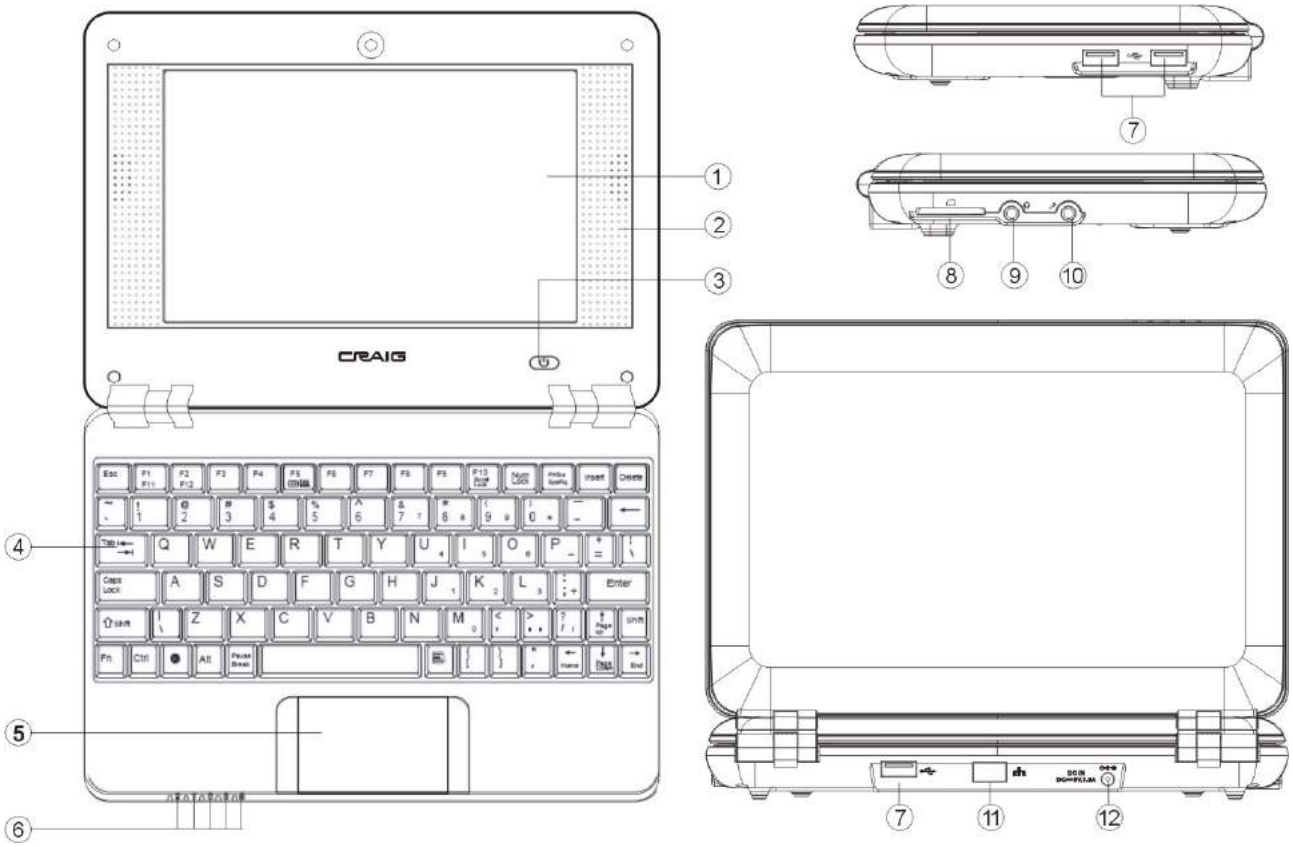

1. LCD Panel
2. Speakers
3. Power On/ Off button
4. Keyboard
5. Touch Pad
6. LED indicators (from Left to Right):
   a. System loaded/ Power On
   b. Battery Charging
   c. Scroll Lock
   d. Caps Lock
   e. Num Lock
7. USB Port
8. SD Card Slot
9. Earphone Jack

10. Mic (Microphone) Jack
11. RJ 45 LAN port
12. DC In Jack

F (Function) Button's assignment:

F1- Browser
F2- Music
F3- Video
F4- Gallery
F5- Calculator
F6- APK installer
F7- E-mail
F8- Clock
F9- Calendar
F10- Explorer
F11- Talk
F12- Settings

Notes:
1. For F11 (F12), press the Fn and F1 (F2) buttons at the same time.

Power Button Usage

Turn On: Press the power button and hold for 3 seconds.
Turn Off: Press the power button and hold for 3 seconds, →tap Power off→ tap OK.

RESET: Press the Reset key to reset the device. Reset will make the device reboot, the effect is equivalent to force shutdown after boot, please use with caution.

Using SD Card

☆ The device supports a maximum of 32GB SD card.
Insert your card into the SD slot until it clicks into place. It's OK
Remove SD Card: Close all applications or documents which have been opened from the card. Click → **Settings** → **Storage, Unmount storage under SD CARD directory** → **OK.** Press the card lightly; it is partially ejected allowing you to pull the card out.
☆ Don't insert and remove the SD card repeatedly in a short time, as this may cause damage to the card.
☆ We recommend using major brands of memory cards to avoid incompatibility.

Getting Started

Turn the device on：Press the power button and hold for 3 seconds.
Wi-Fi Network Setup：Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.
Click , → **Settings**, → **Wireless & network**.
☆ Select **Wi-Fi** to turn on.
• Wi-Fi set up: Set up and manage WiFi access points.

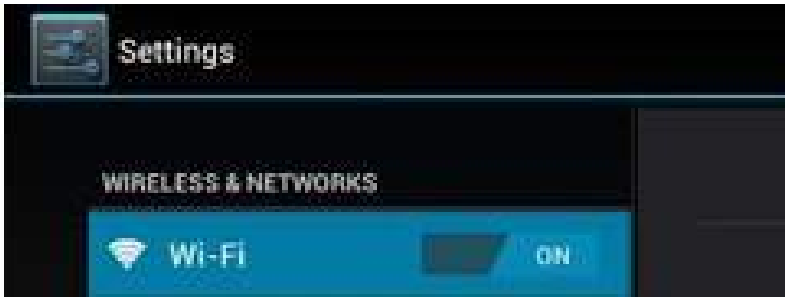

☆The device automatically scans and lists all local Wi-Fi Network found.
☆ indicates secure networks that require login name/password to connect.
☆**Click** the desired network which you want to connect, → enter the **Network Password** if applicable, → **Click Connect**.
☆ **Click** to return to the Desktop screen.
☆ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Click Add Wi-Fi network and follow the prompts to add your network.

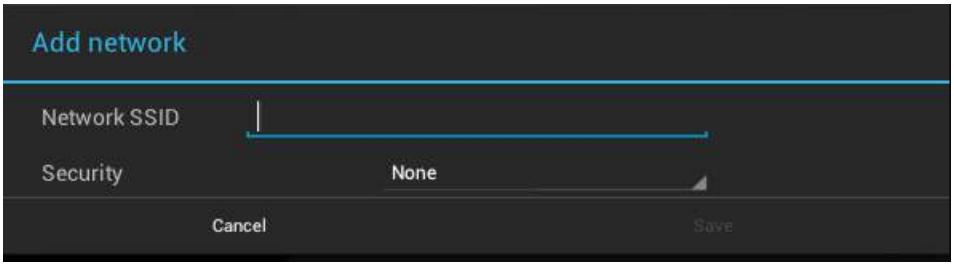

DESKTOP

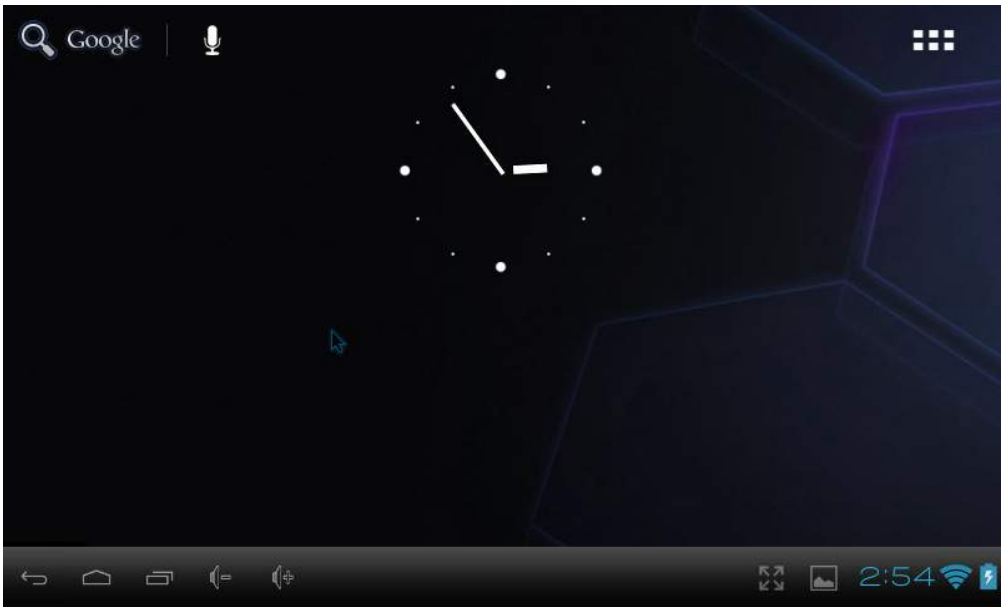

Status Bar

• The Status Bar lies at the bottom of the screen.

-- At the left side there are 

which stand for **Escape, Homepage, Current Plays and Voice – and Voice +**

-- At the right side there are

which stand for **WiFi Signal, WiFi Status, Battery Status, Clock, etc.**

Screen Operation

Size of this screen is 7”. Below are some advise of how to operate the operation zone:

- By clicking the icon, you can get back to the homepage wherever interface you are in.
- By clicking the icon, you can get back to the EX-interface during operation.
- By clicking the icon, a window popups which shows the latest apps you are playing.

• In the main menu interface, you can open and operate any app by clicking on the icons different applications such as Files, Music, Video, Gallery, as well as during web browsing or PDF viewing, you can drag the menu , by pressing the navigation keys (Up, down, left, right arrows), to scrolling up and down the page as well as to enable the page to move different directions respectively.

APPS：Click top right corner **to see APPS page**

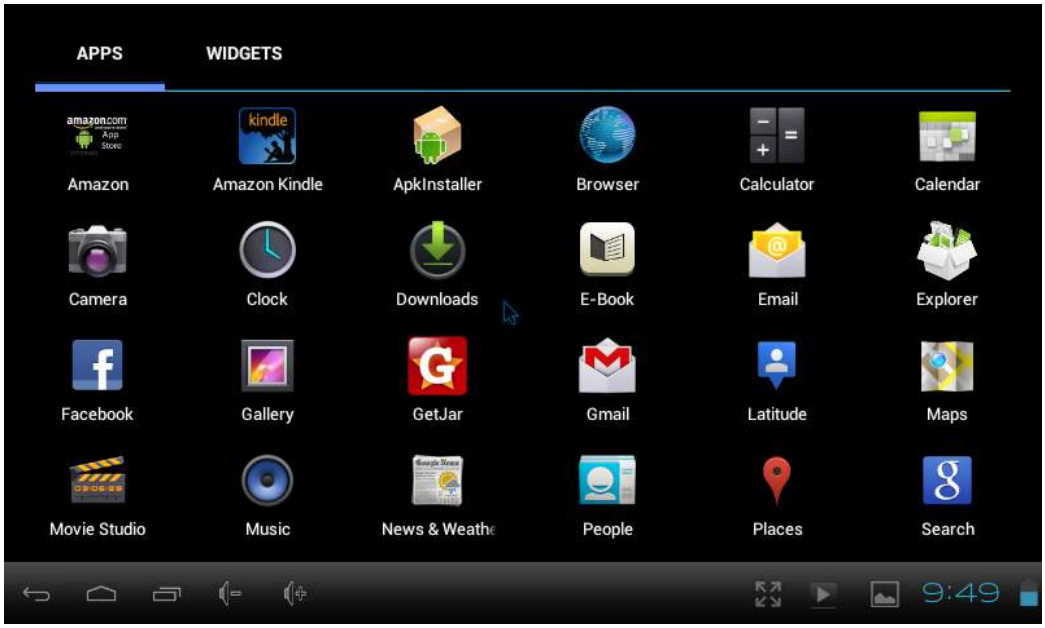

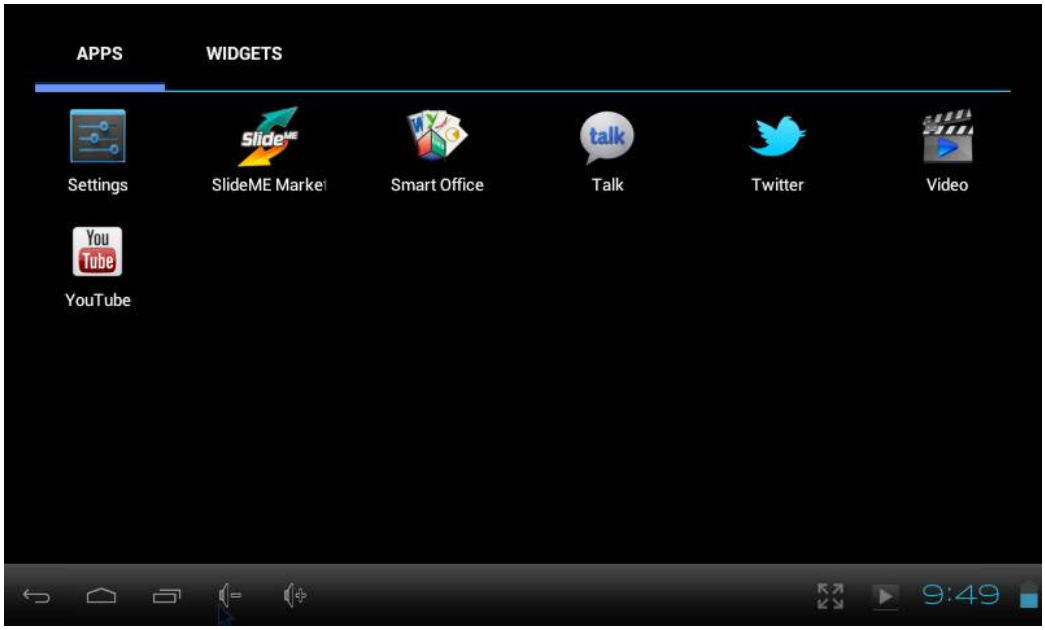

A list of application widget icons are available to select, you can select the icon which will appear in the home page as the shortcut. You will quickly get to the program.

☆ Click on any application icon to launch it.
☆ Click on or using the arrow keys to move to select icons on the screen & press “Enter” to confirm.

Application Management

APK Software Installation and Management

APK Installer (Application Installer)

This device supports third party applications on the basis of android platform. Most of the applications can be downloaded from the websites via the internet, and copied into the internal flash or SD card of this device.

- Click On the Apps page icon, and search for the Apkinstaller and the following screen will appear on the screen:

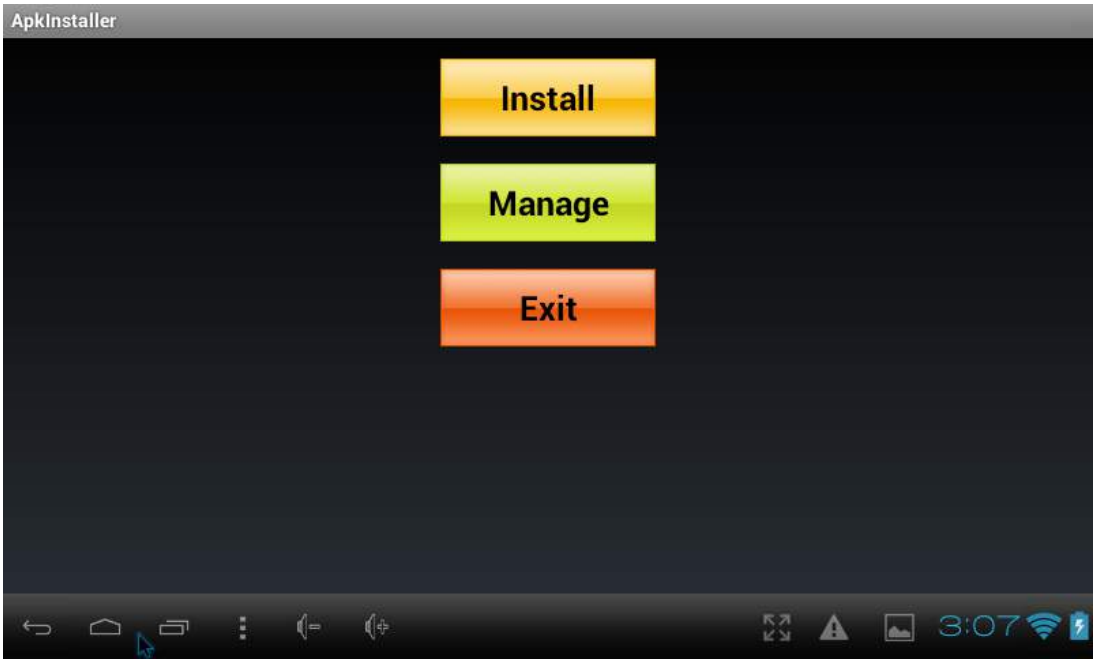

Downloading Android Applications

☆ **Pre-loaded App stores such as Amazon APP store, Getjar and SlideMe are providing many interesting and free applications for downloads. Individual app store may ask for credit card information and personal details. Please be caution that some application may require to pay.**

- **Downloading Android Applications direct from a Website**

You can download Android applications directly from websites, and then quickly and easily install them on your device.

- Click the **Web** application icon to launch the internet browser.
- Enter the desired website URL, and Click the **download** link for the application you want to install on your device.
- After the download is complete, click on the download file (in the **Apps management** screen), → Click **Open** → **Install**.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Click → **Settings** → Device→ **Apps**.
2. Click the application you want to uninstall, → **Uninstall**.
3. Click **OK** to confirm the Uninstall.

Clock

Click the **Clock** application icon. You can see the time and date.

Alarm：

☆ You can use your device as an alarm clock by setting multiple alarms.

This clock icon displayed at the bottom of screens indicates that one or more *alarms have been set and are active.*

Add Alarm

Click the **Clock** application icon.

- Click → **Add alarm**.
- Set up your alarm as desired.
- Click**"Turn alarm on" with"√".**
- Click **Done.**

Delete Alarm

- Click the **Clock** application icon, →
- Click on the alarm you want to delete.
- Click **Delete alarm**.

Video Conferencing

A 3rd party application such as Skype can be downloaded from app stores such as Getjar and Amazon APP store.

BROWSER

Users can connect to the Internet through a browser.

Click the browser icon on the Desktop , and then you can open the Web browser.

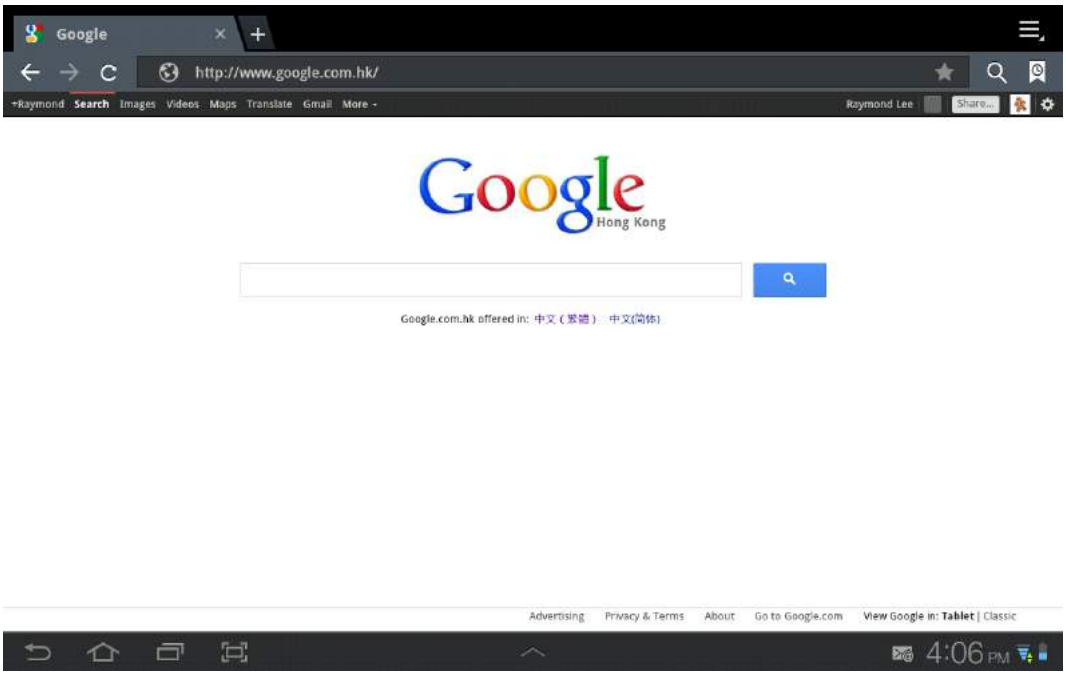

CALENDAR

Click the **Calendar** application icon.
For the first time using the **Calendar**, you need to add an Gmail account. Enter Gmail address and password. Click **Next** and follow the prompts to complete the account configuration. Then you can use the **Calendar**.(Note: we generally recommend that Gmail account, test server for: m.google. com)

Add Event

1. On the **Calendar** screen, click on the date to which you want to add an event.
2. Click on the event time, → click in each entry field to enter the desired event information.
3. Click **Done**.

CAMERA

Click the Camera application icon.

Take Pictures

- In **Camera** → **Click** to take the picture.
- The picture will be saved.
- Click the picture thumbnail enter **Gallery** to scan the picture.
- Press **Back** to the **Camera**.
- Click to exit the **Camera** and back to the **Desktop**.

Take Videos

- Click switch to video, and you can take videos.
- Click to begin and tap again to stop.
- The video will be saved.
- Click the video thumbnail to play the video.
- Press **Back** to the **Camera**.
- Click switch back to camera.

◆ Click to exit the **Camera** and back to the **Desktop**.

Note: You can click to choose to save the files in the Local disk or the SD card.

Email

Inside the apps menu, Click the icon

to enter the 'Email' client. It's required to configure the account information for the first time. Pre-register and set up your email account is necessary. Please be advised that Gmail ACCOUNT registration is necessary in order to access services provided by Google and Android System.

Explorer

Click the

Explorer application icon to view the files on all storage devices *(Internal memory, SD card, USB device)*, and to quickly & easily install Android application on your Netbook.
Use the icons across the top of the screen as follows:

- Internal memory) Your SD card USB

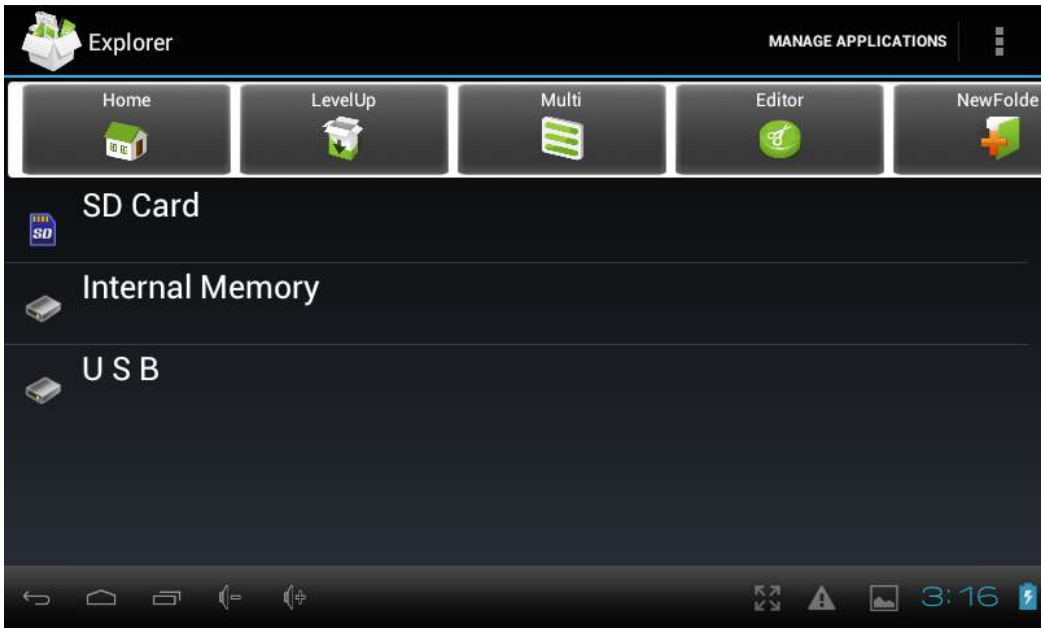

☆ The instructions below are for copying from a SD card or USB storage device into the internal memory. You can use the same method to copy from the device to a SD card or USB storage device.

1. Click the or to display the contents of your storage device.
2. Click and hold in the folder/file you want to copy, → Click **Copy**.
3. Click "Home" to Explorer main menu or "LevelUp" to previous folder
4. Click on the Internal Memory, → Click on the folder into which you want to copy the file.
5. Click "Editor", → Click **Paste**

Delete files： Click and hold on the folder/file you want to delete, → Click **Delete** → **Delete** to confirm the deletion.

MUSIC

– Using the pre-loaded Music Player to play audio files:

☆ Audio file formats supported: MP1，MP2，MP3, OGG，APE，FLAC, AC3，AAC，AMR，DTS，RA，M4A.

When no music files in the audio player playlist, the system will automatically load the music files from the card to the audio player playlist after turning on the audio player .The playlist as shown in the below figure:

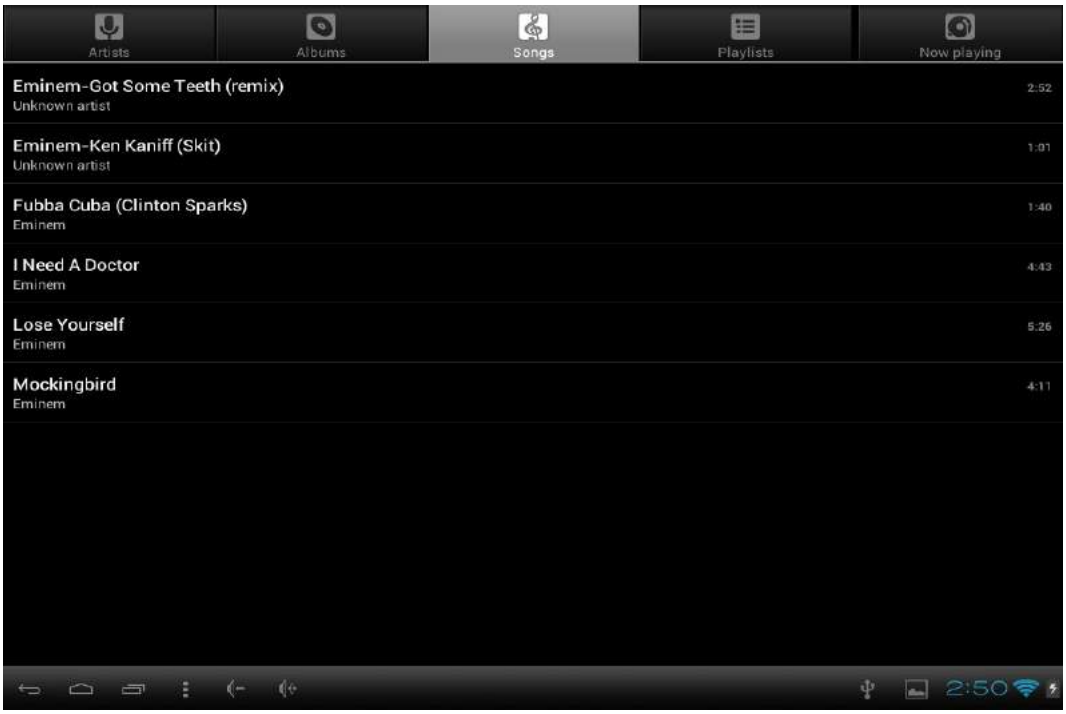

You can pass the audio files by the way of synchronous USB jump drive, or access to audio files by inserting the SD card which it is already full of audio files. You can also download the audio file through the network.

Video

☆ Video file formats supported: MKV（H.264 coding），MPEG（AVI），MOV，FLV，MPG，VOB，MPE，DAT.

In the main menu or desktop, tap the icon

to enter “Video” interface, on where it will list all the video files and image files. As shown below:

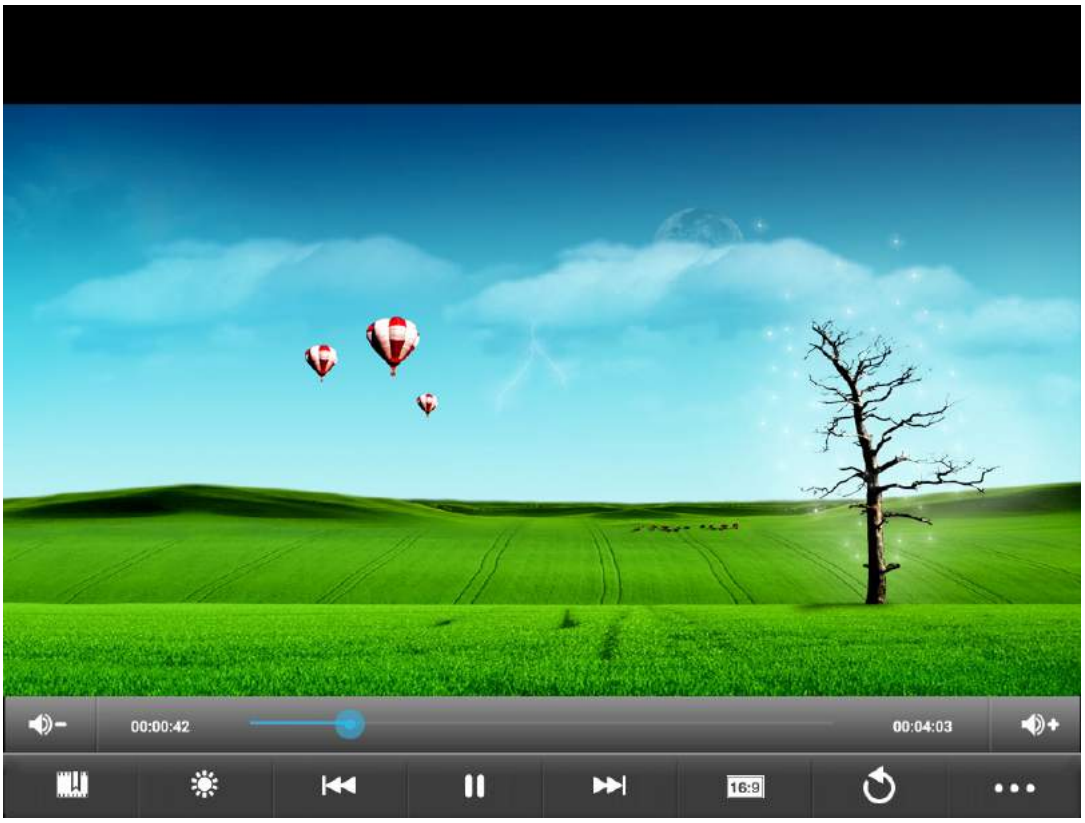

Select the video files into video player interface. You can choose "Play", "Stop," "fast forward", "rewind", "progress bar" and other control keys to control the playback progress.

SETTINGS

Wireless & networks	Wi-Fi	Turn on Wi-Fi.
	Ethernet	Ethernet connection setting / setting up IP address
	Date usage	Display date usage info
	More	Setting VPN / portable hotspot and mobile networks
Device	Sound	Adjust Notification volumes & enable system sounds
	Display	Adjust Brightness, choose wallpapers, setting up sleep time and front size
	Storage	Display internal and external storage memory status
	Battery	Battery Information
	Apps	Apps Management
Personal	Accounts & Sync	ADD account for Sync and ON/OFF Sync for individual account
	Location services	Enable location tracking
	Security	Enable Screen lock, Encryption, setting up passwords and enable Unknown sources that to allow downloading apps from sources other then Google Play
	Language & input	To choose Different System Display Languages and Configure Keyboard setting
	Backup & reset	Enable backup data and Factory Data Reset
System	Date & time	Set up and select time zone, time & date format and to enable automatic date & time
	Accessibility	To enable talk back, adjust system font size, speak passwords, touch & hold delay and Install web scripts
	About Tablet	System updates & display device information

Frequently Asked Questions

Android

Q: What Android OS version is on my Device? A: 4.0

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 4 hours, but you can use the device while it's charging. Use the include power adapter to charge; this device charge via USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: standard SD cards.

Music

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the Explorer application to copy the files into the device.

Photos

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the Explorer application to copy the files into the device.

Video

Q: Can I play YouTube videos on my device?

A: Yes. You can tap the YouTube application icon to quick access videos.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the Explorer application to copy the files into the device.

6. Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

The main Applications on Home Page

Apps Screen:

Internet browser:

- Click to connect the internet

Email,Gmail:

- Click into e-mail settings, after entering the email address and password, simply follow the on screen instructions for set up. This application supports IMAP mail (such as Hotmail, Gmail and Yahoo Mail, POP3 mail and Exchange). Press Menu button on screen to choose and remove email account.

Music :

- Click to enter the music playback mode. The list of Artists, Albums, Songs, Playlists etc... will appear on the screen . Click the desired music file to start playing.

Gallery：

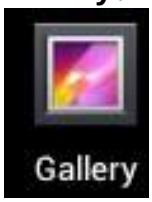

- Click into photo player to play photos.

E-Book:

- Click into the book shelf to select/manage and/or read ebooks.
- To turn to next page, move the cursor to right hand side on the screen then click and hold Left button, then move to left hand side.
- To turn to previous page, move the cursor to left hand side on the screen then click and hold Left button, then move to right hand side.

Amazon App Store:

- Click to browse the Amazon APP Store Main page.
- On the right side of the screen, click on Device without mobile number, then Amazon APP store downloading page will appear.
- Click on download now and app store will be downloaded automatically
- once is done, click on install and Amazon APPs store icon will then be displayed on your app page.

SlideMe:

- Click to enter (and you may sign in) to choose and buy applications. This is a third party Android market and exclusively managed by SlideME LLC. If you have encountered any problem, you may write to SlideME for help or visit the web site at www.slideme.org for details.

Video:

- Click to turn on the video player.
- Click the desired file name to start playing.

Social networking:

This Device has pre-loaded with the most popular social applications for usage. Click the individual icon to login with pre-registered login name and passwords, otherwise, you may register online by following on screen instructions.

Smart Office :

- Read or edit the common document files.
- Allow Online edition and saving of Google DOC

Note: SD card might required to run this application at all time and documents can only be saved in the SD card.

Troubleshooting:

- Cannot power on the Device
  - Check battery.
  - Connect the supplied AC/DC Adaptor and recharge. (During recharging, the device can work normally).

- Screen is flashing after power on is performed
  - Short of power, please charge the battery.

- Earphones do not transmit sound
  - Earphone volume is poor.
  - Try another music file.

- PC connection
  - This device cannot be connected with PC via USB port.

- Cannot go online
  - Check if your Wi-Fi or Ethernet setting is correct , proper password may be needed.
  - Check if your router is working properly.

- Check your signal bar on the Device. It may not be connected due to weak signal.

- How to buy/download the applications from the internet
  - Make sure your device is already hooked up to Wi-Fi/3G networks.
  - Press SlideME or Amazon app store icon on the home page.
  - Search, Buy, Download and Install the desired applications by following the on screen instruction.

Warning: Personal details and Credit Card information may be required, please stay Alert !

- Unable to Read Ebook
  - Application Amazon Kindle already installed in the device. Make sure you are using the "Amazon Kindle" APP to read the ebooks bought from Amazon.
  - Some online bookshops require their own application to buy, download, read and manage ebook purchases. Applications can be downloaded from the web or by going into the SlideMe or Amazon APP store and searching for a suitable one.
  - Barnes and Nobles uses its own reader application, called "Nook". Most other book stores will use third party applications such as Aldiko, which can be download from the SlideMe or Amazon APP store.

- How to copy and read PDF-DRM and EPUB-DRM books from PC?
  This netbook does not support PDF and EPUB-DRM ebooks to be transferred from PC.

- Short Battery life:
  - Some of apps/programs are running internally; turn off all unnecessary apps/programs to save battery power.
  - Turn off either 3G or Wi-Fi if unnecessary.
  - Reduce the screen brightness level.

- Media files can't be found:
  - If new files were added onto the device; click the "Explorer" icon on the APPS menu to search.
  - Use correct Apps to open corresponding media files. Click Video Player to play video files. Click Gallery to view photos. Click Music Player to play music.

- Can't find the desired button within the screen
  - Use the arrow keys to scroll Up and Down (Right to Left) to display the buttons behind the main screen.

- Can't turn to next page in ebook reading
  - Use the touch pad to double click on the mouse pad or mouse touch to go from right to left to turn to next page.

- How to enter the Settings menu while applications/programs are running
  - After turning on the application/program, click the Menu button to enter settings menu. Set each setting as instructed by the on screen instructions (functions depend on the software of the applications).

- Cannot hook up with Wi-Fi or the Wi-Fi signal is weak
  - Make sure Wi-Fi is available in your location and you are authorized (with correct password) to hook up to it.
  - The device may be too far from the signal source. Move your device closer to the signal source.
- How to remove personal data/email accounts from the device:
  - In the settings menu, select and enter "Backup & reset" setting.
  - Click "Factory data reset" button to enter.
  - Click "Reset tablet" button.

- Click “Erase everything” button to start reset. Wait until the device finishes resetting by itself. The device will turn off automatically. (It may need a few minutes).

IMPORTANT:
After Factory Data reset, all users’ data (users installed applications, passwords, e-mail accounts, g-mail accounts, media files etc...) will be deleted. Backup this data before resetting.

- Is a USB Mouse compatible with the device?
  - Yes, you can connect a USB Mouse through the USB port.

- The cabinet/device is getting warm:
  - This is normal. After some time of operation/recharging, the cabinet/device will become warm.

PRODUCT SPECIFICATIONS

Hardware Configuration:

CPU Processing Speed	1.3GHz
Memory/ROM	4GB (Internal 2.2GB flash memory has be assigned for Android operating system and pre-loaded Apps, existing 1.8 GB flash space is available for further operation needs.)
Memory/RAM DDR III	1 GB
Memory Card Slot	SD card(up to 32GB), not included
Color Display	7 inch TFT Color LCD Non-glare
Resolution of Display	800 x 480 Pixels
Battery Type	Built-in 2 pcs x DC ⎓ 3.7V, 1500 mAh rechargeable Lithium-ion Polymer Battery; recharging via DC in jack
USB	3 x USB 2.0 port
Built in Speaker	2 x 8 ohm, 1 W
I/O ports	3 x USB ports, SD Card Slot, Phones Jack, Mic Jack, LAN port, DC Jack
Wireless Interface	WiFi 802.11b/g/n
Battery life	After full charge, up to 4 hours for Video playback or 3 hours for eBook reading or 5 hours for Music playback (Assuming Wi-Fi and others program/application are turned OFF; brightness and volume set to middle)
Input of the supplied AC/DC Adaptor	AC 100-240V~, 50/60Hz, 0.5A
Output of the supplied AC/DC Adaptor	DC ⎓ 9V, 1.5A

Software Configuration:

Operating System	Android 4.0.3
Browser	Web Browser
Video file supported	MKV(H.264 HP), AVI, RM/RMVB, FLV,MPEG-1,MPEG-2
Music file supported	MP3, APE, FLAC, AAC, AC3,
Photo file supported	JPEG, BMP, GIF, PNG, TIFF
Email	Support Web mail & Pop mail

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Accessories:

1 x Instruction booklet
1 x AC/DC Adaptor

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for $20.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, Fl 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.
Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email:service@craigelectronics.com
or
Please call 1-866-321-7191

Printed in China CLP281x-IB-E0CR1-B0US